



MEASURING SUCCESS


How to Measure for **CUSTOM BLINDS AND SHADES**



LEVOLOR®


CHOOSING INSIDE VS. OUTSIDE MOUNT

Before measuring, choose between two mounting styles.

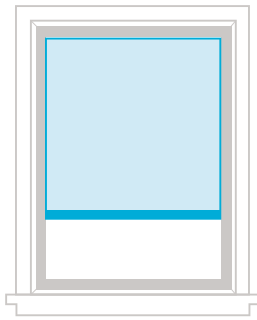

Inside Mount

Clean, integrated look and the most popular choice. (Window frame must accommodate Required Minimum Depth for your desired window treatment. See below for details.)

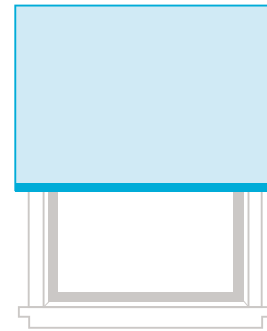


Outside Mount

Makes windows appear larger and provides superior light control. (Chosen when Inside Mount is not an option because the window frame does not have enough depth for the window treatment.)


DEPTH MATTERS

A common measuring mistake is not considering the depth needed when choosing Inside Mount. Depth determines which window treatment your window can accommodate with Inside Mount and how it will look when installed.

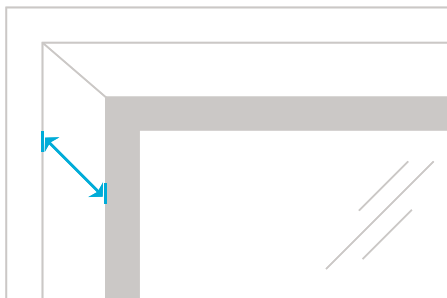

Required Minimum Depth


Required Minimum Depth varies by window treatment, ranging from ½ inch to 3 inches. Use the **Integrated Ruler** located in this brochure to check the Required Minimum Depth by product.

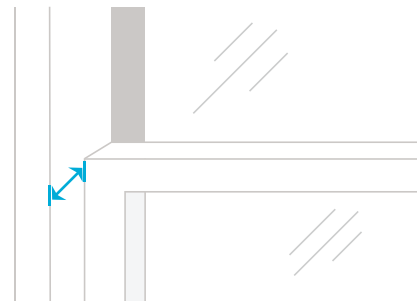

Window Obstacles

Window Obstacles are anything that can interfere with how a window treatment functions or hangs, including double-hung windows and hardware. These obstacles need to be accounted for when measuring depth.


MEASURING FOR INSIDE MOUNT BLINDS AND SHADES

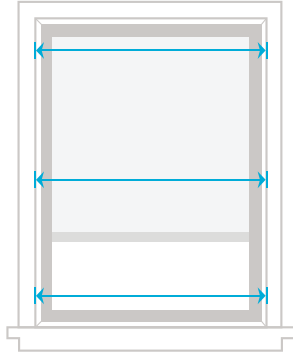

Measure Width

Measure inside the window frame horizontally in 3 places to the nearest 1/8 inch: top, middle & bottom.

The shortest measurement = your width.

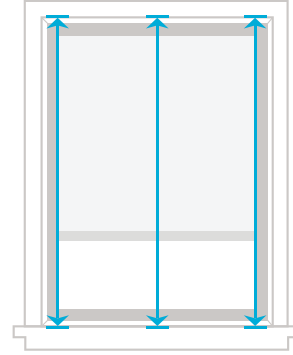

Measure Height


Measure inside the window frame vertically in 3 places to the nearest 1/8 inch: left, middle & right.

The longest measurement = your height.


Measure Depth

Measure the inside depth to the nearest 1/8 inch at the top of the window frame. Be sure to consider any Window Obstacles.

The shortest measurement = your depth.

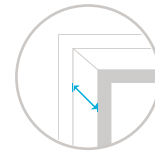


MEASURING FOR OUTSIDE MOUNT BLINDS AND SHADES

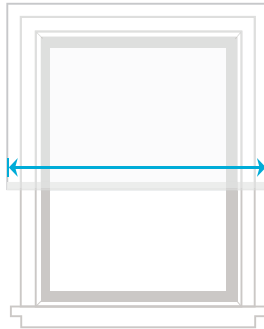

Measure Width

Measure horizontally to the nearest 1/8 inch between the outer-most points where you want your window treatments placed. For optimal light control, it's recommended to overlap each side of the window frame by at least an additional 3/4 inch.

For Outside Mount, window treatments will be made to your exact measurements.

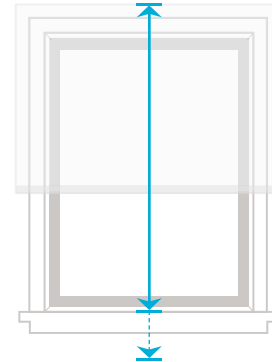

Measure Height


Measure vertically to the nearest 1/8 inch from the top of where you want the window treatment to be installed (headrail location) to the top of the window sill, or measure to point of desired length if there is no sill.

CONSIDERING THE RESULTS


Even if windows can accommodate Required Minimum Depth, the headrail and valance may protrude from the window frame instead of being flush. Some protrusion is common but varies by product and should be considered when making your selection.

For results based on different headrails, valances, and operating systems, visit LEVOLOR.com to see Product Specification of each window treatment.

Flush

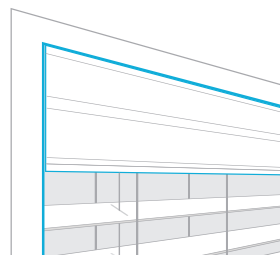

Protruding

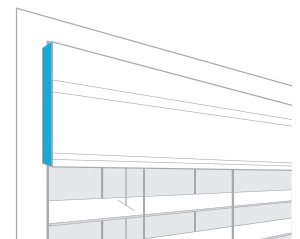

MEASURING TIPS

- Do not take deductions from your measurements. For Inside Mount, we will make adjustments to ensure a perfect fit.
- For Outside Mount installed outside of the window trim, you may need extension brackets or spacer blocks to account for the trim thickness.
- Measure each window – even ones that appear identical.
- All measurements should be to the nearest 1/8 inch.
- Use a metal tape measure as cloth ones may stretch.

MEASUREMENT CHART

REQUIRED FIELDS:


Fill out the columns below with measuring information in inches.

If you are ready to order and know this information, fill in below.

Room or Window	Product Type	Mount Type Inside/Outside	Width	x	Height	Depth	Color & Code	Operating System	Options
				x					
				x					
				x					
				x					
				x					
				x					
				x					

21-0012-012

▼ FOLD HERE ▼

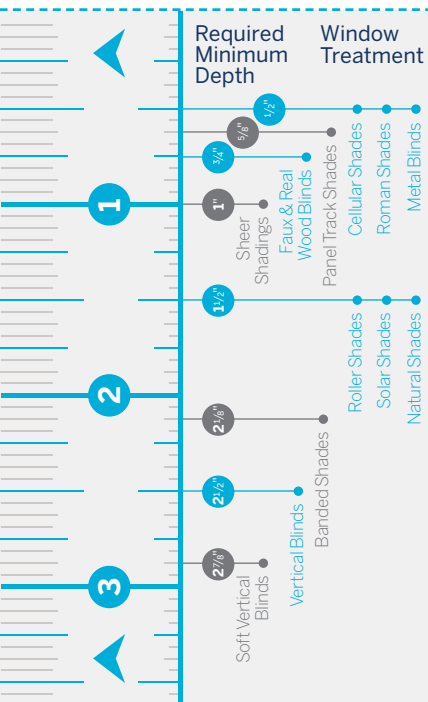

INTEGRATED RULER

The Integrated Ruler helps you determine which window treatments your window frame can accommodate based on their Required Minimum Depth.

This ruler only indicates all Required Minimum Depths but does not account for depth of final product options. For these details, see Product Specifications of each window treatment.

For more questions, visit
LEVOLOR.com/how-to-measure
 or speak with an expert at
1-800-LEVOLOR.

There you have it! Now you're ready to order your LEVOLOR® Blinds and Shades.

TO USE THIS RULER

After folding along the dotted line, place the ruler against the inside of your window frame at the top of the window. If the markings for your window treatment selection extends outside of the window frame, you will need to select a different window treatment or choose Outside Mount.

NOTE: Print on 8.5 x 11 at 100% to ensure accurate depth measurement.

